



# Skil 88 Gears Replacement

Removing and replacing the gears in the front housing.

Written By: Matt



## INTRODUCTION

Is your motor running but the drill is not turning? Replace those gears to start providing torque to your drill bit.

 
---



### TOOLS:

- [Flathead Screwdriver](#) (1)
-

## Step 1 — Front Housing

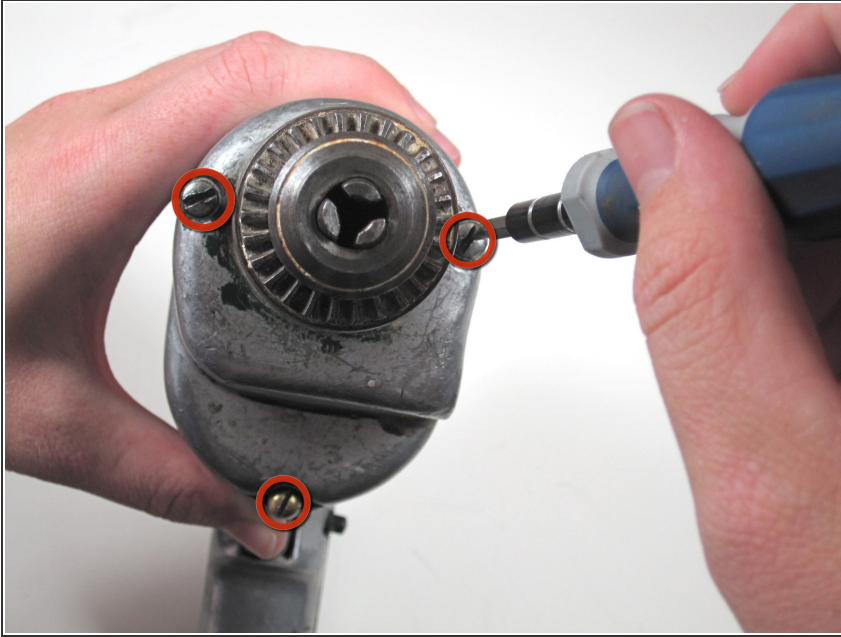

- On the front of the drill, remove the three 2" flathead screws connecting the front housing to the rear housing.

## Step 2

 


- Pull the front housing apart from the rear.

⚠ The motor and gears might fall out when you are pulling it apart.



## Step 3 — Gears

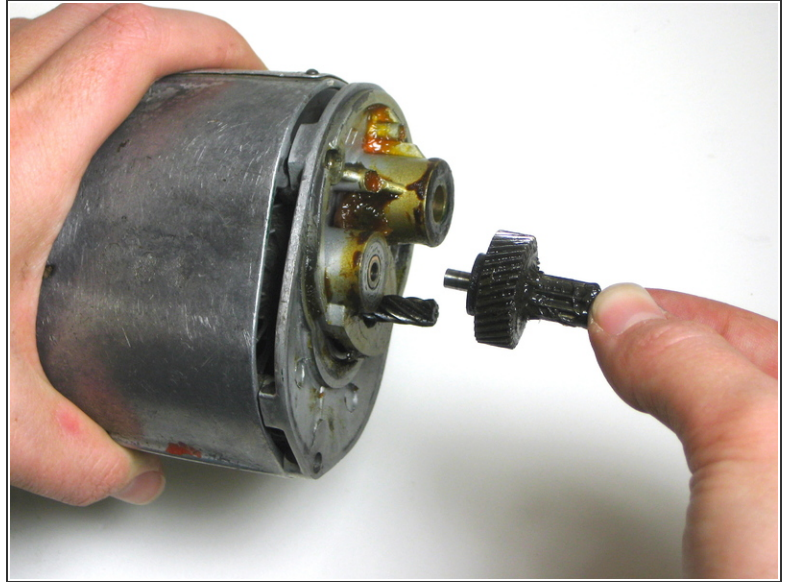

- Remove gear from the divider and add the new gear.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 03:38:59 PM.